


Lumo

POWER KIT INSTALLATION INSTRUCTIONS

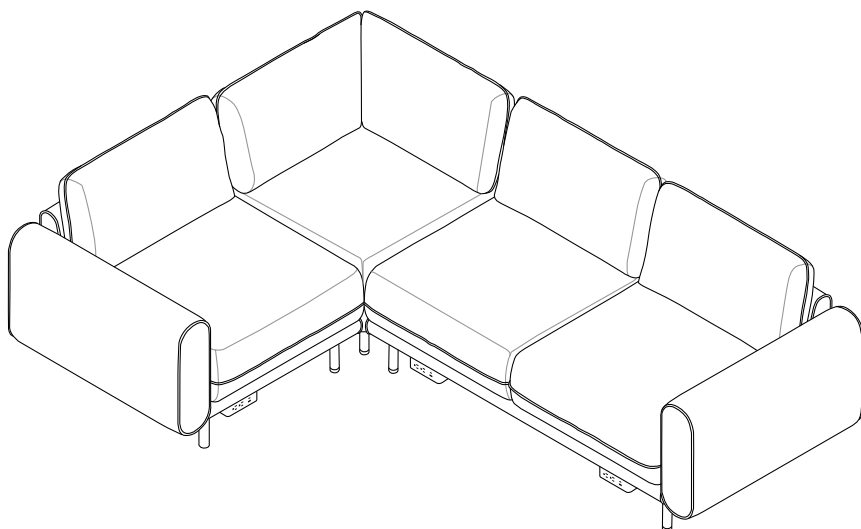


Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.

To report any issues with this product, contact our customer experience team at: (888) 274-8664 or sitonit@exemplis.com.


Recommended Tools

- Cordless Drill
- #3 Phillips Bit

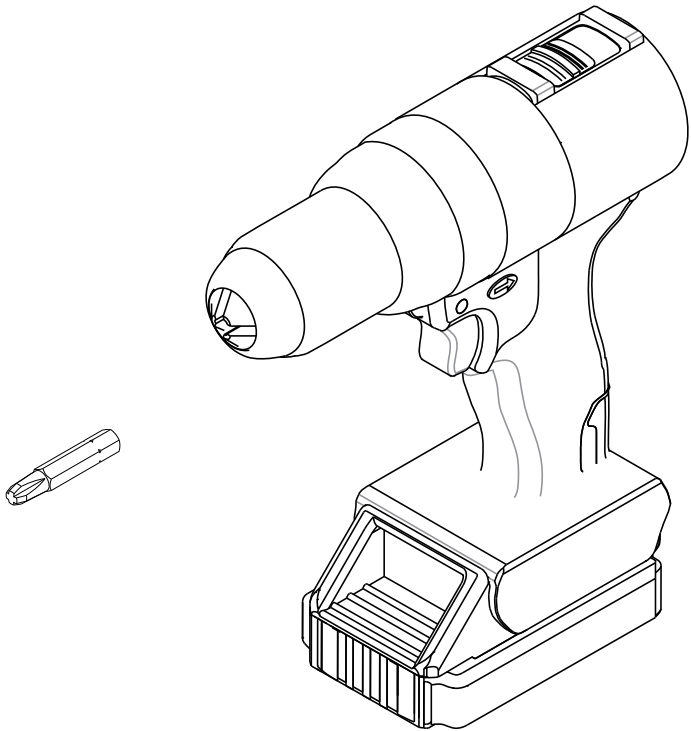


Parts


- Infeed (1)
- Jumper (1)
- Power Module (2)
- Splitter (1)
- M8 × 19 mm Screw (59)
- P-Clips (45)

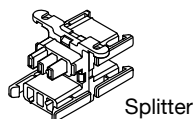


Splitter

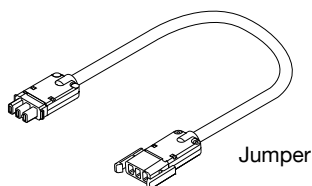


Jumper

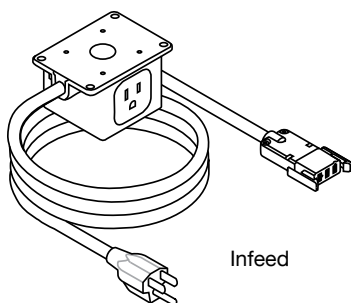


Infeed

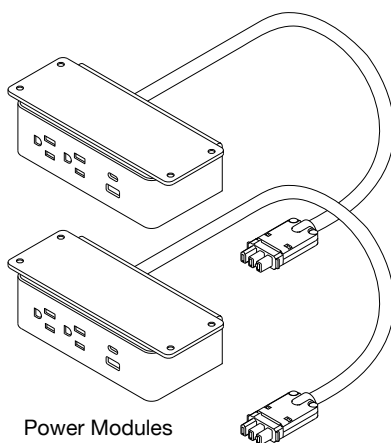

Power Modules

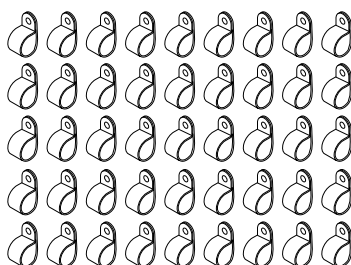


P-Clips

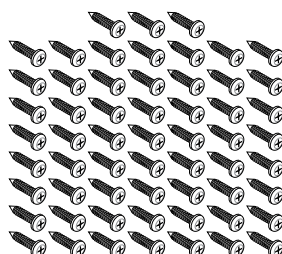

M8 × 19 mm Screws

Step 1: Lean the two models onto their backs so that the bottom can be accessed and connect the corner unit using the ganging bracket.

Flip over only two connected pieces at a time for safety.

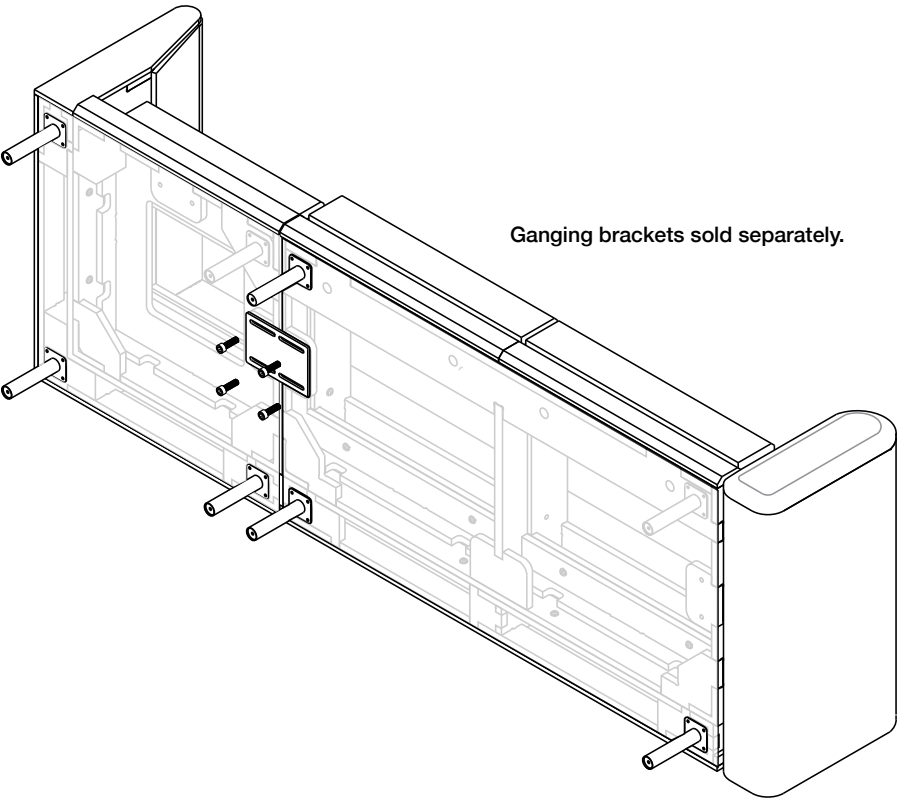


TOOLS




1/4" Hex L-Key

1:1 HARDWARE

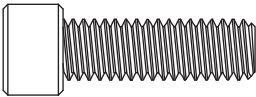




5/16"-18 x 1" Screw

Step 2: Unzip tybar to provide access to the frame.

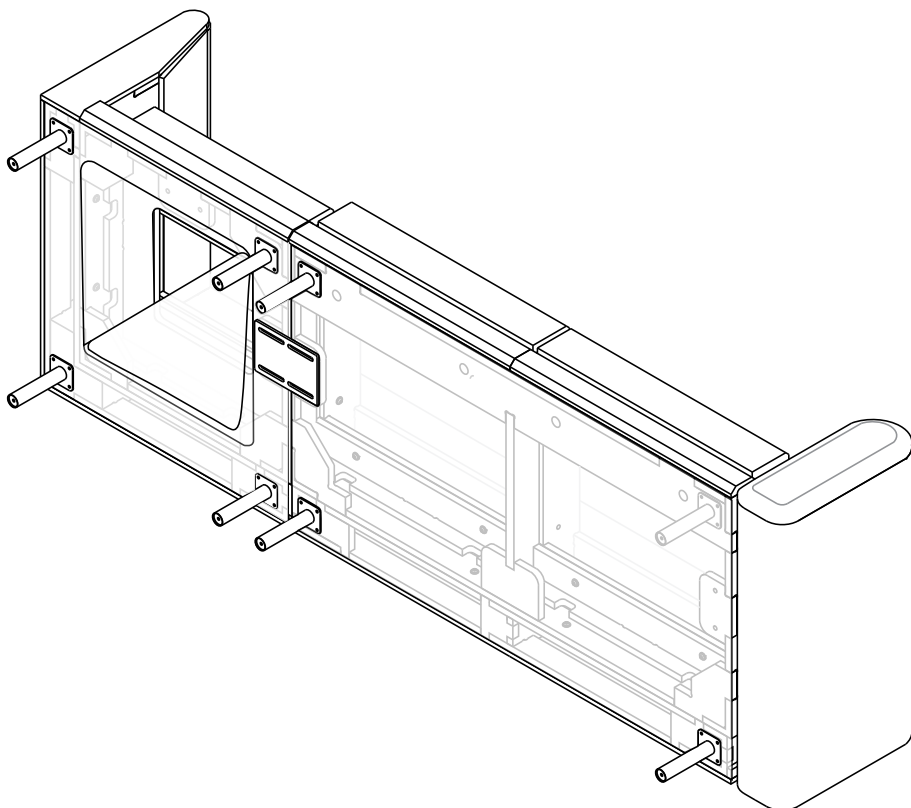


Step 3: Attach the power infeed on one of the rear supports.

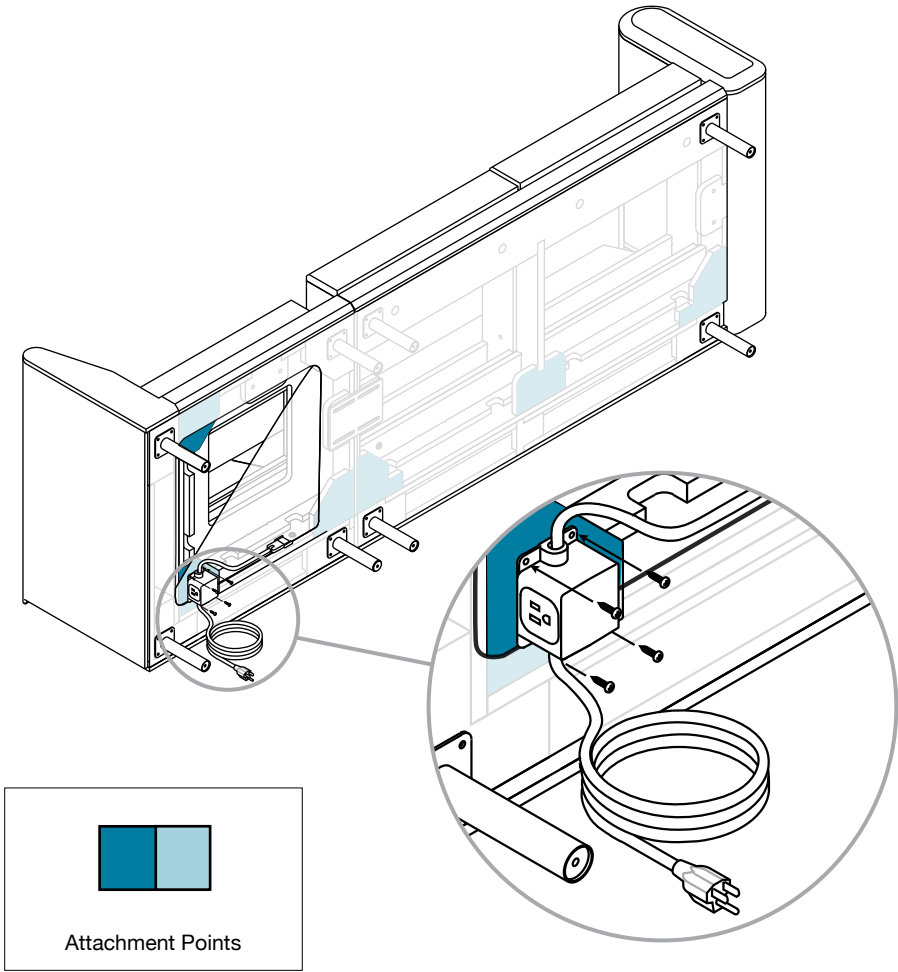

<p>1:1 HARDWARE</p>  <p>M8 × 19 mm Screw</p>	<p>TOOLS</p>  <p>#3 Phillips Bit</p>
--	--

Step 4: Attach the splitter on one of the other rear supports.

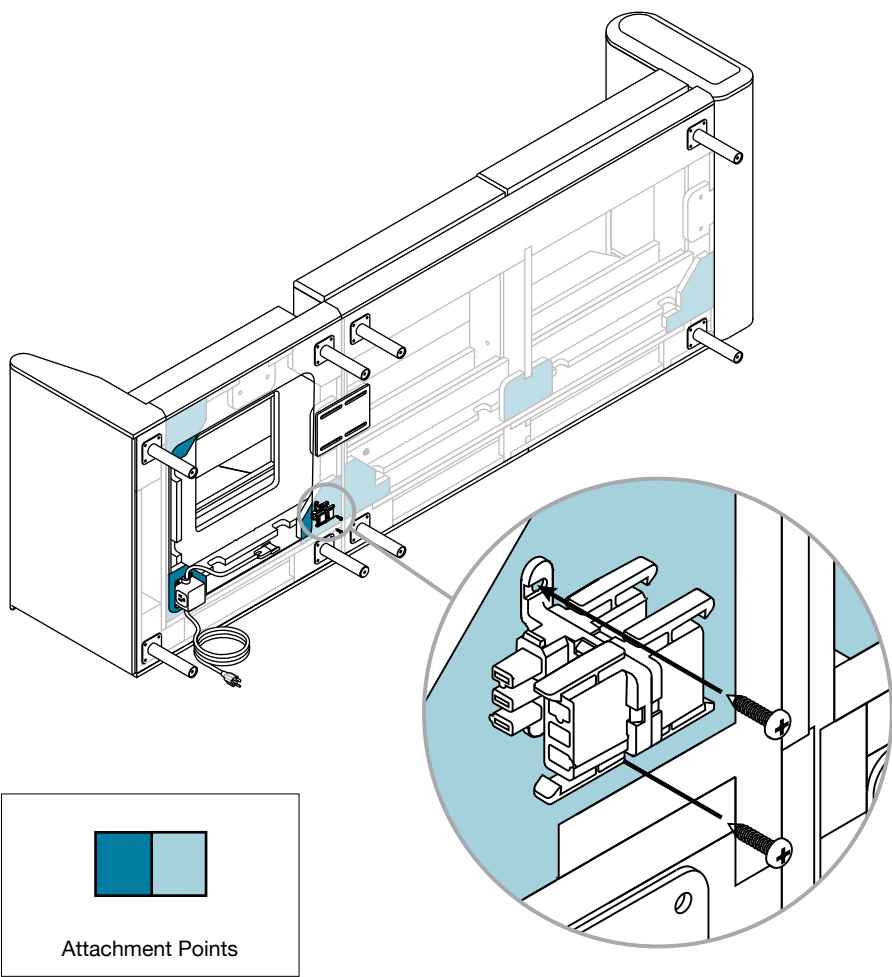


1:1 HARDWARE



M8 × 19 mm Screw


TOOLS

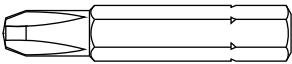

#3 Phillips Bit

Step 5: Attach the power modules anywhere along the seat deck front spreader.

Modular power kit comes standard with two power modules, but splitter will support three power modules. Additional power module can be purchased separately.

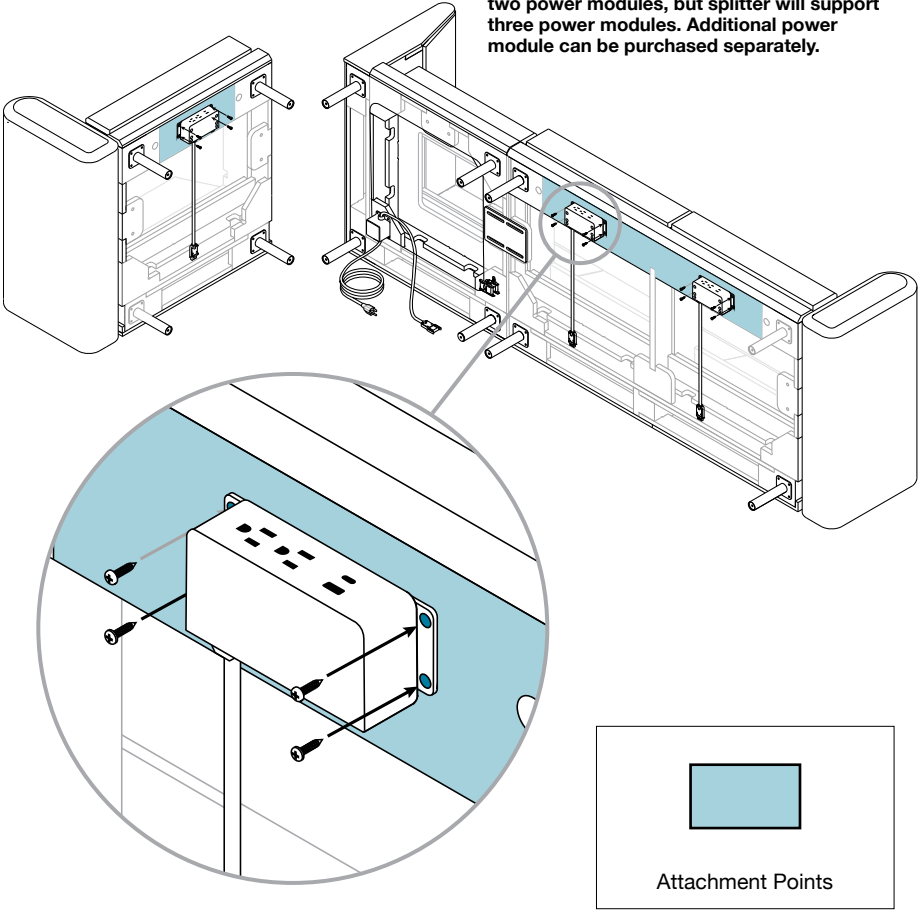


1:1 HARDWARE




M8 × 19 mm Screw


TOOLS

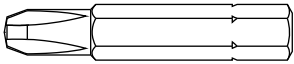


Step 6: Plug the infeed into the splitter.

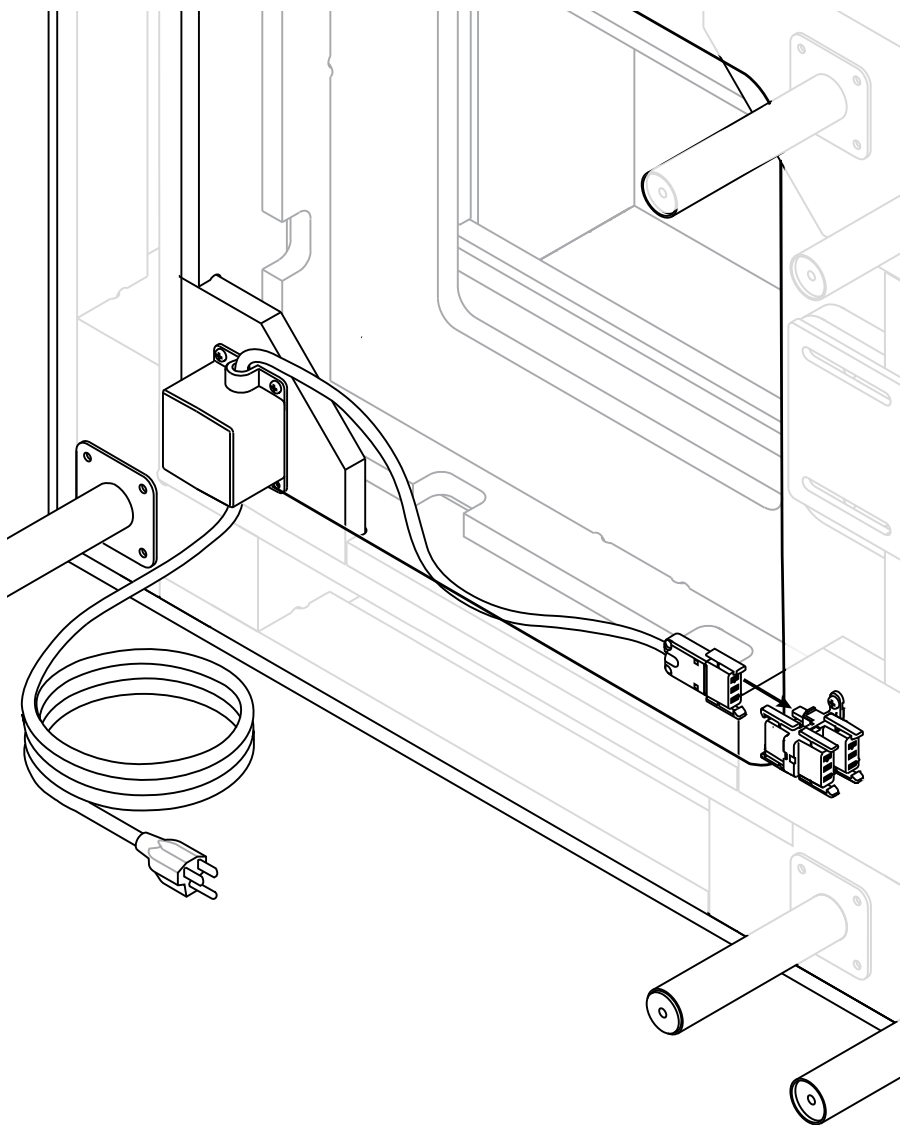


Step 7: Plug the power modules into the splitter. Continue to step 8 if the power module's cord does not reach the splitter.

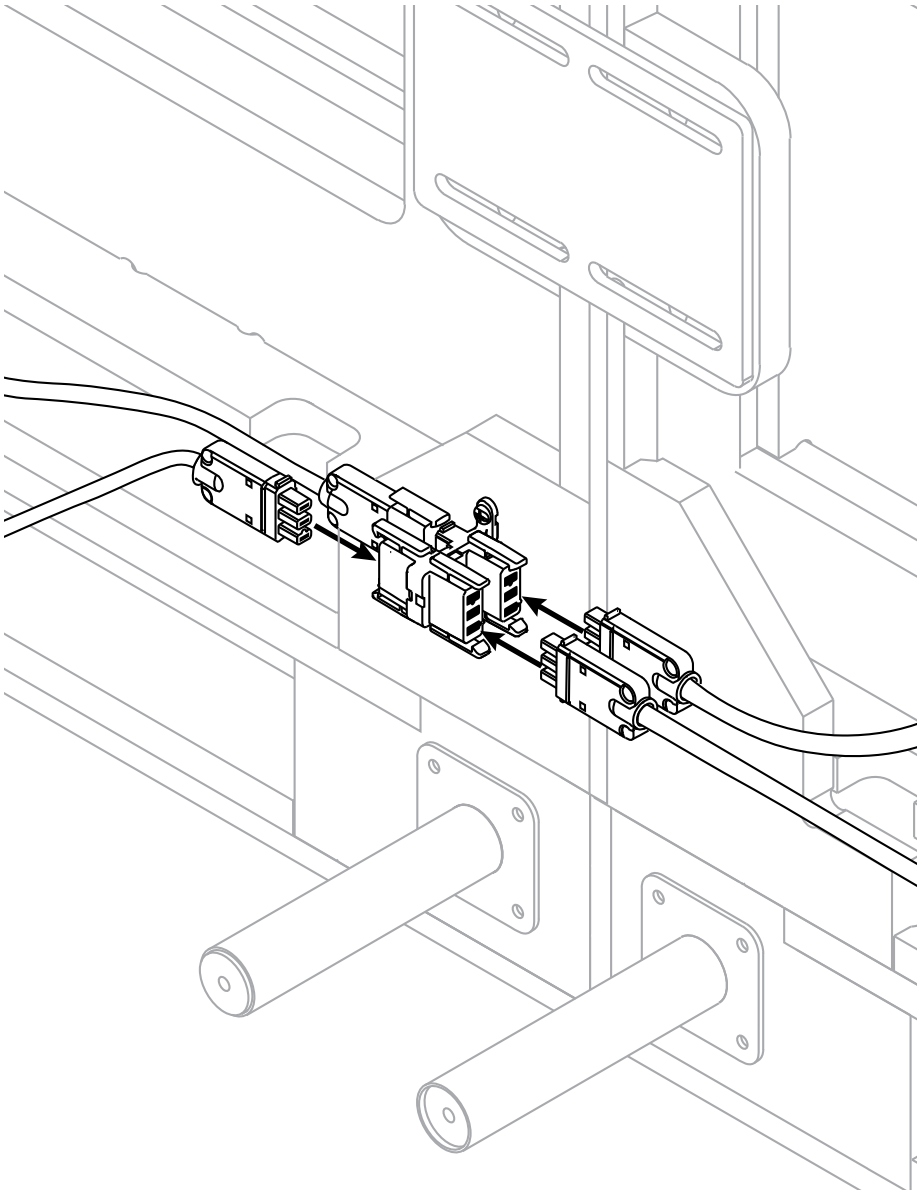

Step 8 (Optional): Use the jumper to span the longer distance from the power module to the splitter

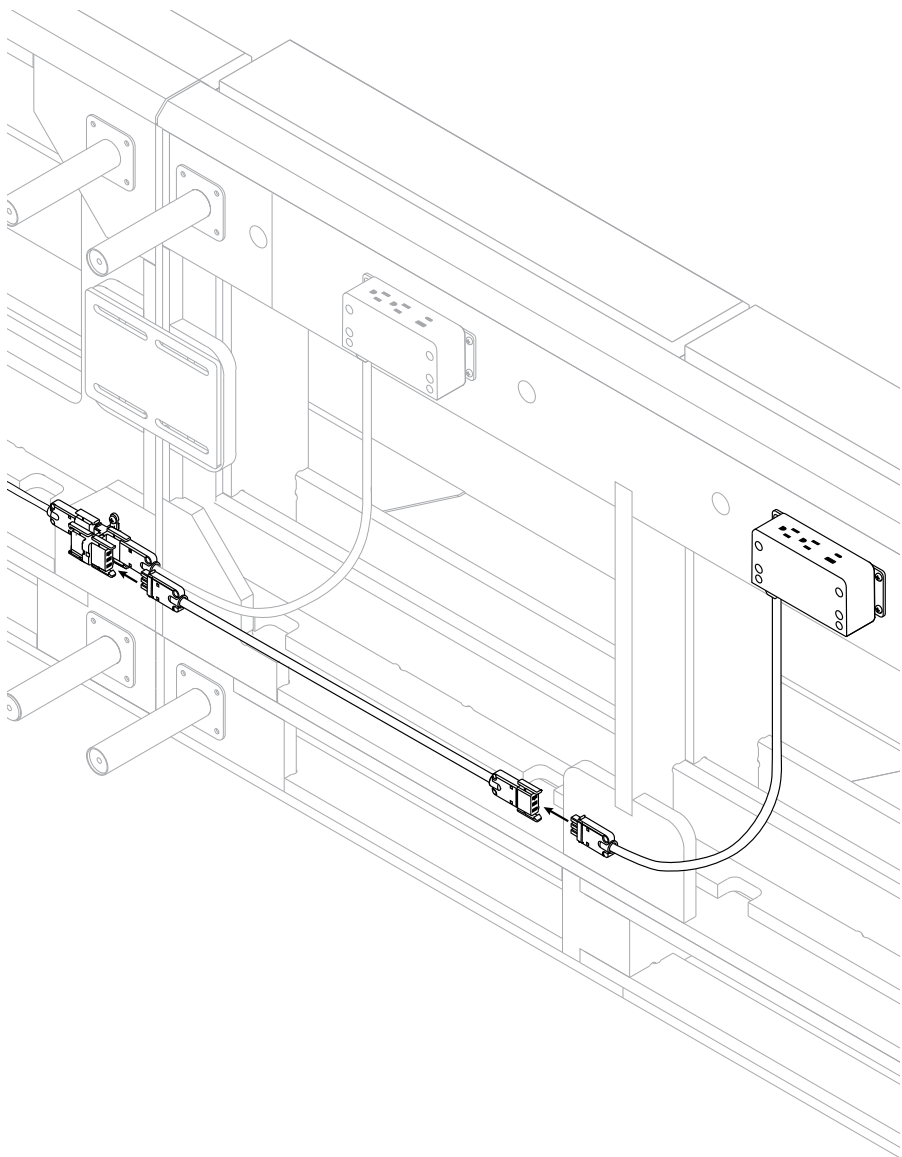

Step 9: Use the P-clips to manage the spare wires. Tuck any additional wire length inside the zipper pocket.

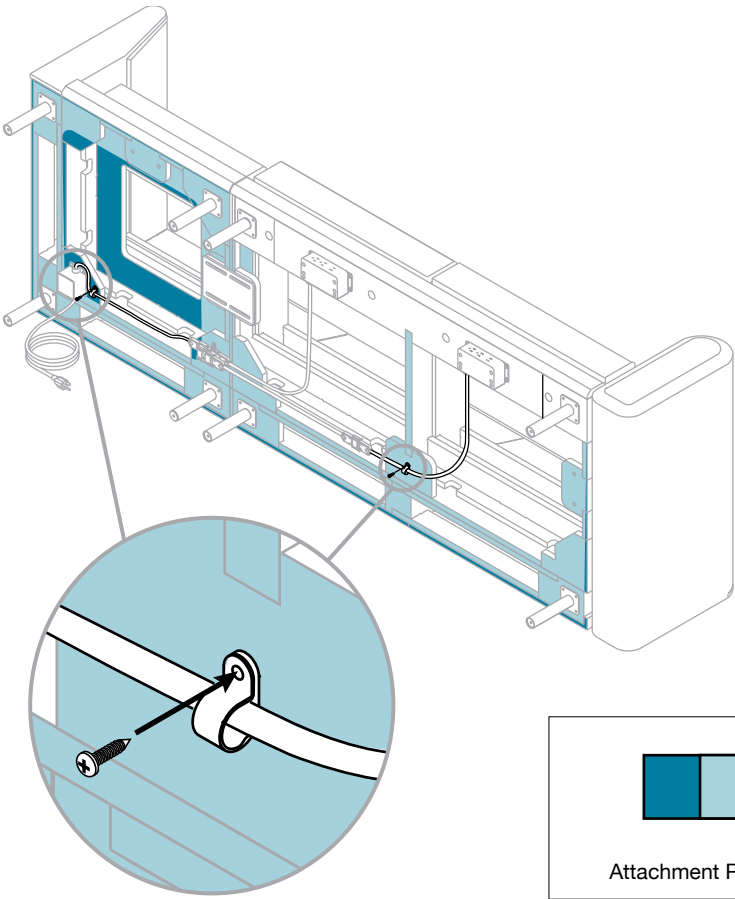

1:1 HARDWARE



M8 × 19 mm Screw

TOOLS

