

ADJUSTABLE LUMBAR SUPPORT KIT INSTALLATION INSTRUCTIONS

For Focus Highback, Midback, and Stool

Parts Included in Kit

- Installation Instructions
- 1 Lumbar Support, RH*
- 1 Lumbar Support, LH*
- 6 1¼" Phillips wood screw

* Component is marked RH or LH and will only fit one way.

Tools Required

Phillips screwdriver

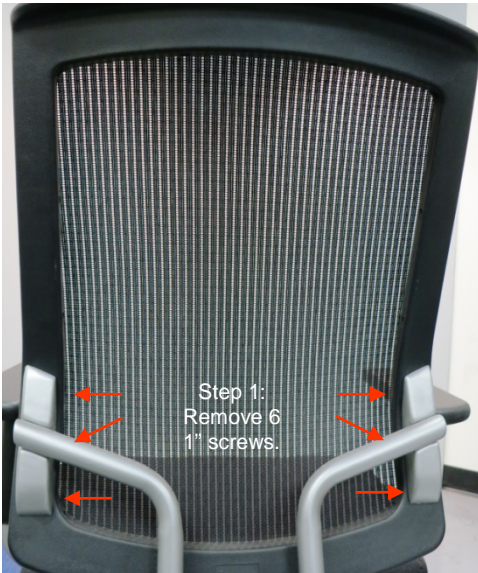


Fig. 1

Step 1

Remove the 6 1" Phillips screws that secure the lower inner perimeter to the outer back (fig. 1).

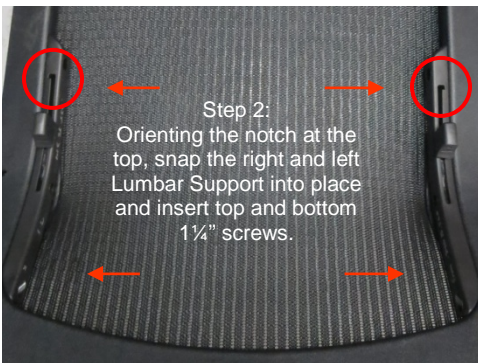


Fig. 2

Step 2

The Lumbar Supports are notched at the top. Orient the Lumbar Support with the right-hand notch on the right side of the chair, and the Lumbar Support with the left-hand notch on the left side of the chair (circled in Fig.2). Gently pushing each Lumbar Support against the mesh, snap into place against the inner perimeter as shown in fig. 2. For each side move the slider to the top and install the bottom 1¼" screw. Then move the slider to the bottom and install the top screw.



Fig. 3

Step 3

Move the slider up slowly until the hole in the slider is aligned with the hole in the center of the Lumbar Support. Install a 1/4" screw completely through the center of each Lumbar Support (fig. 3).



Fig. 4

Step 4

Slide the Lumbar Supports up and down to ensure proper operation. The chair's ergonomic design uses tight mesh and requires about 15 lbs. of force to adjust. This is normal. Adjust the Lumbar Support to the top position before handing off to the user.



Scan for video or visit www.sitonit.net/focus_lumbar