SitOnIt • Seating®

SPECIFICATIONS

PATTERN: Element PRICE: FG 2
LEAD TIME: 2-day
WARRANTY: 5 years

AVAILABILITY: Approved for use on all seating models.

CHARACTERISTICS

Content: 100% Polyurethane

Finish: Antimicrobial (silver based ion technology)

Backing: 70% Polyester; 30% Cotton

Width: 54"
Pattern Repeat Size: N/A
Weight Per Linear Yard: 20.3 oz
Cleaning Code: WS / BC (5:1)
Country of Origin: China

PERFORMANCE

Abrasion: 200,000 D.R. Seam Slippage (Warp): 61 lbs
Tensile Strength (Warp): 130 lbs

Flammability: CATB117-2013

UFAC Class 1 NFPA 260 Class 1 MVSS 302 IMO A 652 (16) 8.2

Colorfastness to Light Rating: 4

Lightfastness: 100 hours
Crocking, Dry: Class 5
Piling Resistance: Class 5

Note: Multiple factors affect fabric

durability and appearance retention, including end-user application and proper maintenance. Wyzenbeek results above 100,000 double rubs have not been shown to be an indicator of increased lifespan.



ENVIRONMENTAL

PVC Free


Healthier Hospitals (HHI) Compliant

Phthalates Free

Lead Free

Calfiornia PROP 65 Compliant

No Formaldehyde

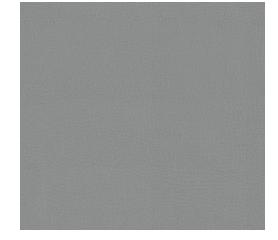

ELEMENT

SitOnIt • Seating®

CARE + MAINTENANCE GUIDE

STAIN RESISTANCE

Ink:Class 4Permanent Marker:Class 1Coffee:Class 4Blood:Class 4Urine:Class 4Ketchup/Mustard:Class 3Wine:Class 3Lipstick:Class 1

Rating System

Class 5 - No evidence of stain present

Class 4 - Slight evidence of stain present

Class 3 - Noticeable evidence of stain present

Class 2 - Considerable evidence of stain present

Class 1 - Excessive evidence of stain present

GENERAL MAINTENANCE RECOMMENDATIONS

- · Clean and maintain your furniture regularly.
- A professional cleaning service is recommended.
- · Do not saturate the furniture with liquids.
- Treat stains quickly. The stain will become increasingly more difficult to remove the longer it sits.
- Pretest any cleaning method or agent in aninconspicuous area of the furniture before using in a visible location.

STAIN AND DISINFECTIENT RECOMMENDATIONS

A clean cloth, dampened with the appropriate cleaning solution, should be applied to the affected areas as soon as possible. Blot the fabric with the treated cloth, working from the outer edge of the stained area and moving in toward the center. In order to effectively draw out the stain, renew the cleaning cloth as often as necessary to maintain an absorbent surface.

Spot clean with upholstery shampoo, foam from a mild detergent, or mild dry cleaning solvent. Hot water extraction or steamcleaning is not a recommended cleaning method. Clean spots or stains from the outside to the middle of the affected area to prevent circling.

For light cleaning, use soap and water.

For difficult stains, use Fantastik® or Formula 409®.

For disinfecting, use a 5:1 water/bleach diluted solution.

Note:

Residue left by cleaning agents will degrade and shorten thelife and/or affect the product's appearance if not removed.

ANTIMICROBIAL FINISH EXPLAINED

Element has an antimicrobial finish. This finish is a silver based ion technology that inhibits the growth of bacteria and other dangerous microbes. It also suppresses the growth of harmful mold, mildew and fungus.

This finish is registered with the United States Environmental Protection Agency (US EPA).

APPROVED CLEANERS

This list represents some of the most common options available and is not intended to be comprehensive.

Benefect

Clorox Disinfecting Wipes

Clorox Hydrogen Peroxide wipes

Diluted Bleach Solutions (5:1 water tobleach)

Dispatch disinfectant towels with bleach

Diversey Morning Mist Neutral Disinfectant Cleaner

Fantastik

Greased Lightening - Degreaser

Greenworks All PurposeCleaner

IAQ

Lysol wipes

Microban

Neutral Disinfectant Cleaner

Oxivir Tb

Oxycide

PDI Sani-Cloth Bleach germicidal disposable cloths

PDI Sani-Cloth Plus germicidal disposable cloths

PDI Sani-Hands wipes

PDI Super Sani-Cloth germicidal disposable wipes

Purell Food Service Sanitizer

Recon

Shockwave

Virex 256

409

ONYX

RUBY

